



Fuel Drain Kit 1614B010A00 Installation instructions

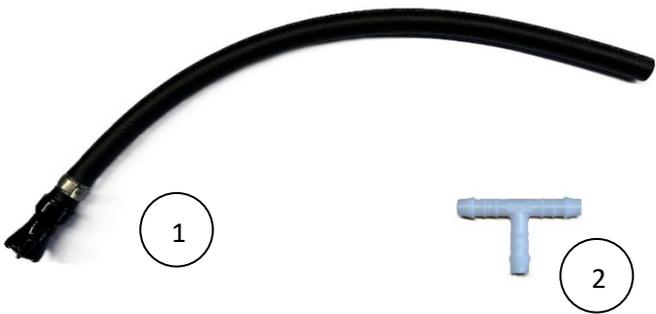


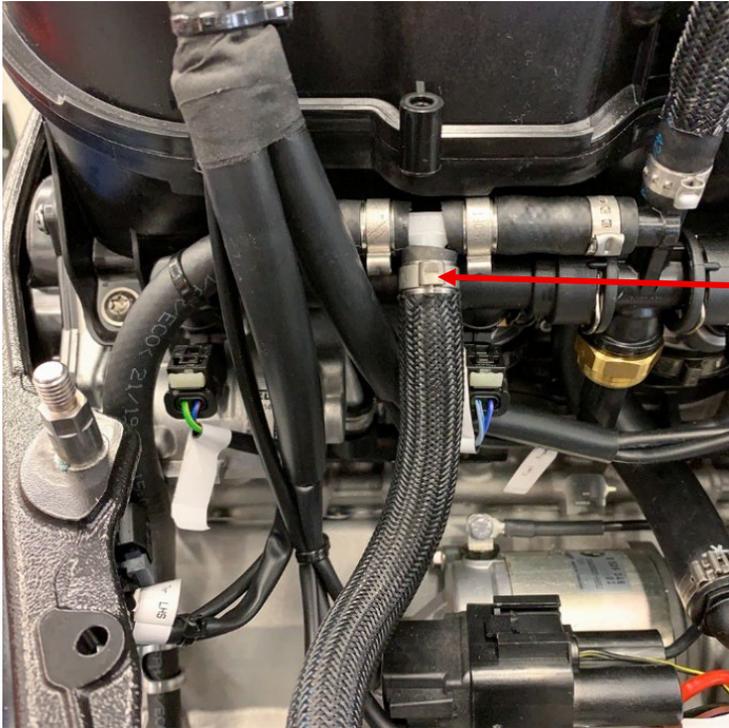

The hose (1) is installed between the tank outlet hose and the injection rail, as shown in Figure 1. Use the single-ear clamps and T-piece (2) supplied.

Tank outlet hose

Figure 1

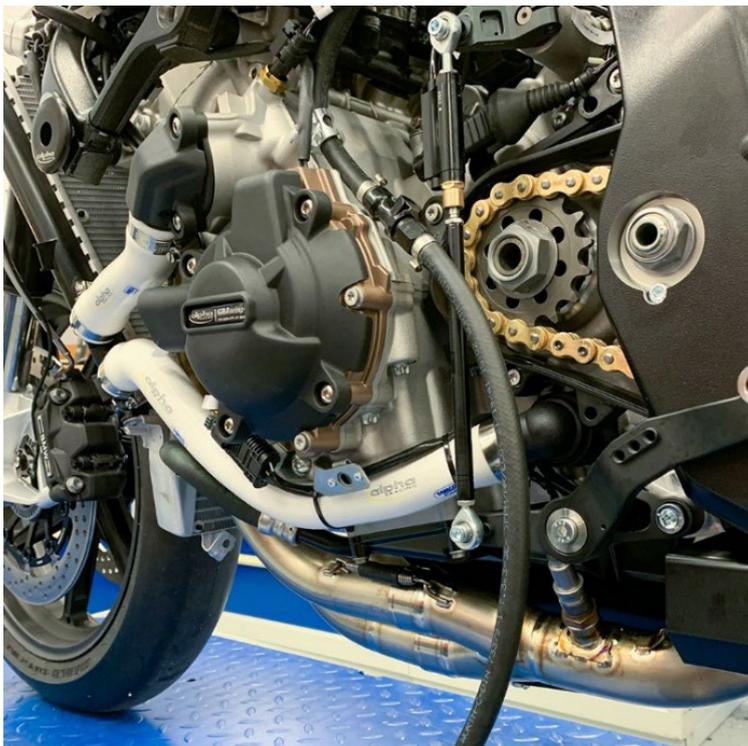

Hose (1) is routed downwards on the left-hand side and screwed to the motor housing using the screw and hose guide supplied.

Hose (3) is then connected to hose (1) via a quick coupling with valve for drainage.

Figure 2



Figure 3

The cable (4) is plugged into the smaller connector on the fuel pump.



Figure 4

The other end of the cable (4) is routed down to the left of the rear frame. There, it is attached to the rear frame using a cable tie.

The cable (5) is then plugged in there and routed back to the front.



Figure 5

The cable (5) is laid under the tank to the control unit and plugged into the connector labeled Fuel IF.



Figure 6

To pump out, you must disconnect the plug connection and connect cable (6) instead of cable (5).

Cable (6) must be connected to an external battery (not included).