

Montageanweisung Bremsleitung Mountingsheet Brakeline

Sicherheitshinweise

- Die Bremse ist ein lebenswichtiges technisches Bauteil. Arbeiten an der Bremsanlage erfordern ausreichende technische Kenntnis und handwerkliche Fertigkeiten. Bei Unsicherheit die Arbeiten in einer Fachwerkstatt durchführen lassen!
- Für das Entlüften der Bremsanlage sind spezielles Werkzeug und Fachkenntnisse notwendig.
- Bremsflüssigkeit ist gesundheitsschädlich und greift Oberflächen (besonders Lacke) an!
- Bremsflüssigkeit immer in geeigneten Behältern auffangen und vorschriftsmäßig entsorgen!
- Benetzte Hautpartien und Oberflächen mit viel Wasser abspülen!
- Bremsflüssigkeit mit der richtigen DOT Nummer verwenden.
- Mit Bremsflüssigkeit verunreinigte Bremsbeläge ersetzen.

Bremsleitungen wie auf den Fotos abgebildet montieren und entlüften.
Auf Freigängigkeit der Bremsleitung bei Lenkbewegung achten.
Bremsleitungen dürfen nicht scheuern oder eingeklemmt werden
Vor Inbetriebnahme Bremsanlage auf Funktion prüfen!

! BEI UNSICHERHEITEN ZU DEN OBEN GENANNTEN PUNKTEN, DIE ARBEITEN IN EINER FACHWERKSTATT DURCHFÜHREN LASSEN!



Safety instructions

- The brake system is an essential part of your bike. Maintenance of the System regards technical understanding. If you are unsure of your technical abilities, take the bike to your workshop.
- To bleed the brake system, you need special tools and technical knowledge.
- Brake fluid is very harmful to health and environment and corrodes surfaces (in particular paint).
- Dispose of the brake fluid in responsible manner and with suitable canister.
- With brake fluid contaminated skin / surfaces, rinse with a lots of water.
- Use the right DOT No. of brake fluid.
- Don't use brake pads that have been contaminated with brake fluid.

Install the brake line such as pictured and bleed the system.

Check that your steering moves freely, brake lines must not rub or be trapped Check correct function before you ride the bike!

! IF YOU UNSURE OF ANY OF THE ABOVE POINTS, TAKE THE BIKE TO YOUR WORKSHOP!

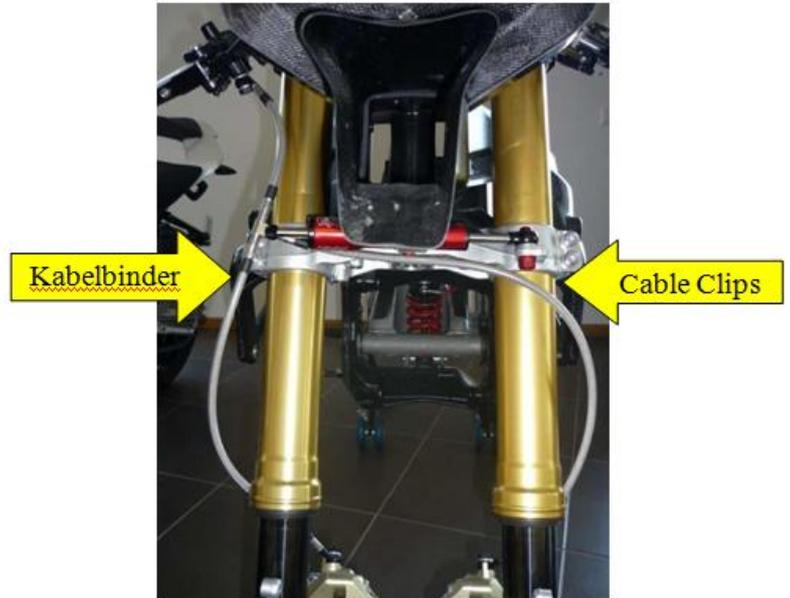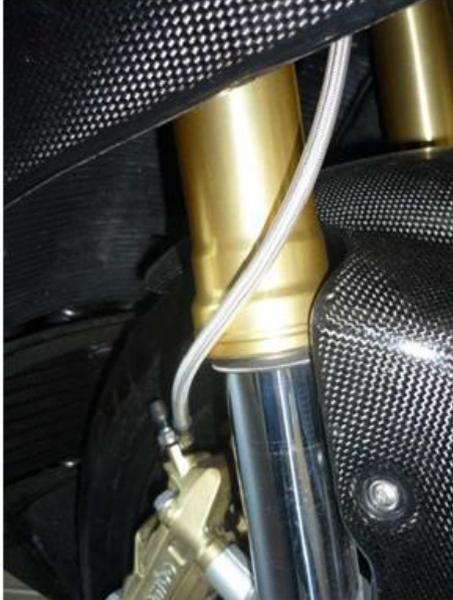

Bremsleitung kann mittels Kabelbinder und einem Stück Gummischlauch an der Gabel fixiert werden.

Brake cable can be fixed to the fork by means of cable ties and a piece of rubber hose.