

Mounting instruction handlebar tool

Attention: When using the alpha Racing SBK triple clamps, the steering shaft D=12,45mm (Art. No.: 8330A008A01) must be mounted to fix the handlebar tool!

1. Place the tool's ruler on the end of the handlebar (Figure 1). Adjust the length stop (1) and adjust the stop pin (2) on the triple clamp.

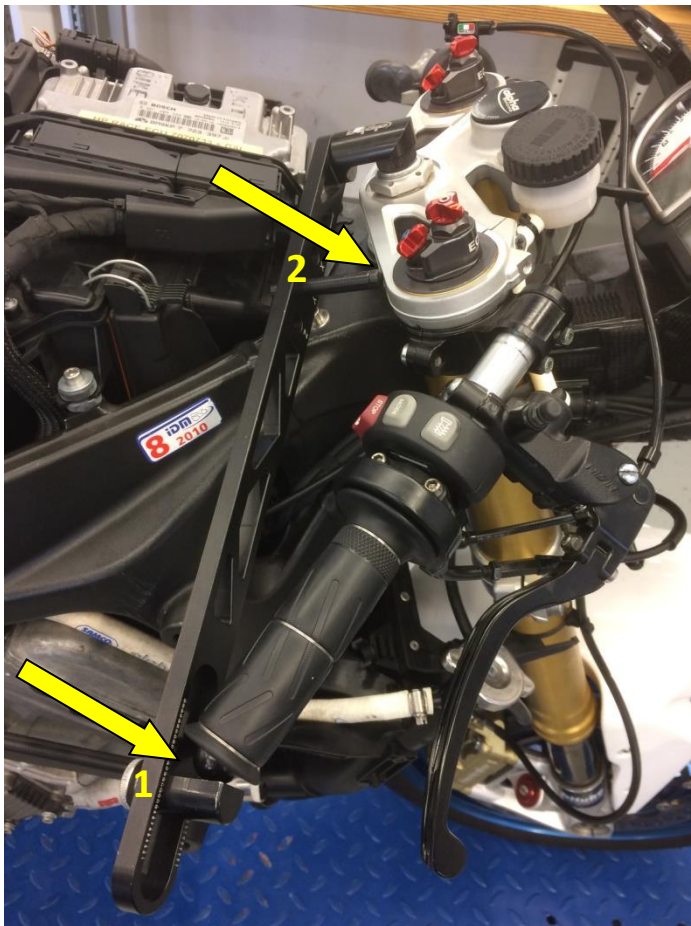


Figure 1

2. Then turn the ruler to the other side to adjust the second handlebar and adjust the handlebar so that it has the same length and angle (Figure 2).

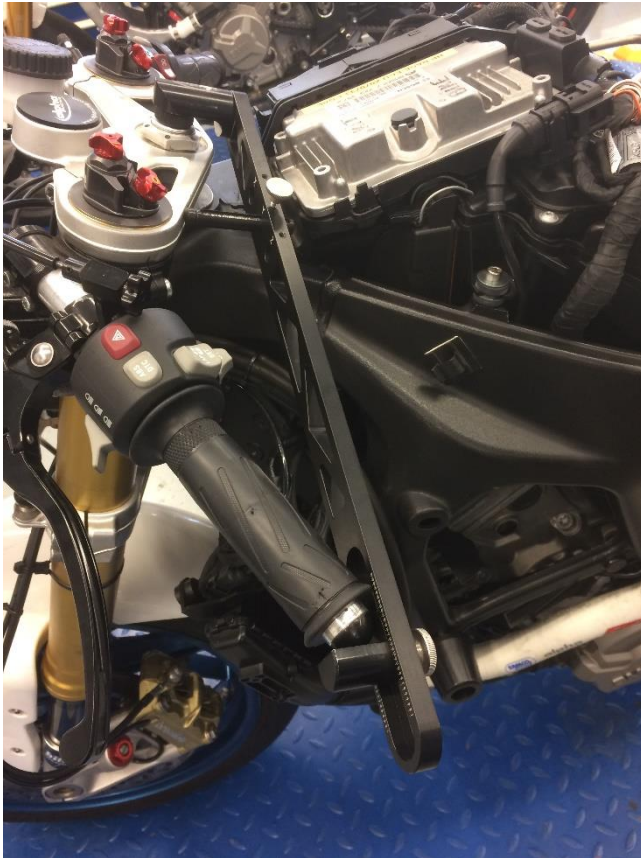


Bild 2